

Quick Start Guide

Establish Channel Positions

Repeat the following for each desired frequency:

1. Tune radio to a desired frequency.

Automatic positioning:

- 1.1 Press the AUTO button until the display shows "Automatic SWR"
- 1.2 Key up the transmitter with at least 5 Watts in AM/FM mode (use 10 Watts for 6 meters*)
- 1.3 Wait until the antenna stops moving

Manually set the position:

- 1.1 Press the MANUAL button until the display shows "Manual Control"
- 1.2 Transmit in AM or FM mode
- 1.3 Use the UP and DOWN arrows to position the antenna to the desired position

2. Hold the SAVE button down for five (5) seconds to store the frequency/position in memory.

Operating in the Automatic Mode

Press the AUTO button until the display shows "Automatic Memory".

Tune the radio and to reposition the antenna, transmit AM or FM with at least 5 Watts* for a few seconds.

Operating in the Manual Mode

Press the MANUAL button until the display shows "Manual Memory".

Press the UP and DOWN arrows until the display shows the desired frequency.

The antenna will position in a few seconds.

NOTES

- For radios with a tune button, that button may be used for the above transmits periods.
- The TARGETuner may be left in "Automatic SWR" mode for AM/FM transmissions to provide real-time re-tuning.

Buttons and Display

