

## New Online Battery Capacity Calculator Simplifies Backup Battery Selection

Don't get caught short! Specifying the capacity of your ham shack's backup battery involves more than multiplying your rig's average load current by the desired backup time in hours. If you don't consider derating factors such as capacity tolerance, battery life cycle and run time relative to 20 hours, your back-up battery won't have the capacity to give you years of trouble-free service.

West Mountain Radio's new online *Battery Capacity Calculator* takes those factors into account and is ideal for use with AGM and Gel sealed lead acid batteries.

Check it out online at: [www.westmountainradio.com/batcalc](http://www.westmountainradio.com/batcalc)

---

## West Mountain Radio Launches Video Tutorial Series

West Mountain Radio has released two new video tutorials that will increase your enjoyment of your Amateur radios.

Our *Going Digital* video tutorial is ideal for those hams new to digital mode communication and rig control and wondering what a RIGblaster sound card interface does. Using the new RIGblaster Advantage as an example, it explains how to interface your radio to a PC and control your radio using the popular *Ham Radio Deluxe* rig control software.

The Powerpole® Connector and Powercrimp video will teach you how to build robust DC power systems for your rig based on Anderson Powerpoles. You'll learn how to select, crimp and assemble ARES and RACES standard polarity protected connectors using West Mountain Radio's Powercrimp tool in minutes.

Be sure to tell your friends and fellow club members about these informative new videos, post the link on your website and publish it in your newsletters. Both videos are available online at:

[www.westmountainradio.com/nlvideo](http://www.westmountainradio.com/nlvideo)

## In this Issue

- ⌘ **Battery Capacity Calculator**
- ⌘ **Video Tutorial Series**
- ⌘ **PWRgate/PWRguard Discount**
- ⌘ **Build Your Own UPS**

## Share your Feedback


West Mountain Radio has plans to enhance, update and improve many of the existing products and software. If you have ideas or suggestions, we would love to hear from you.

**Share Feedback**



## Distribute. Monitor. Protect

Protect your rig with  
PWRguard and save \$\$\$

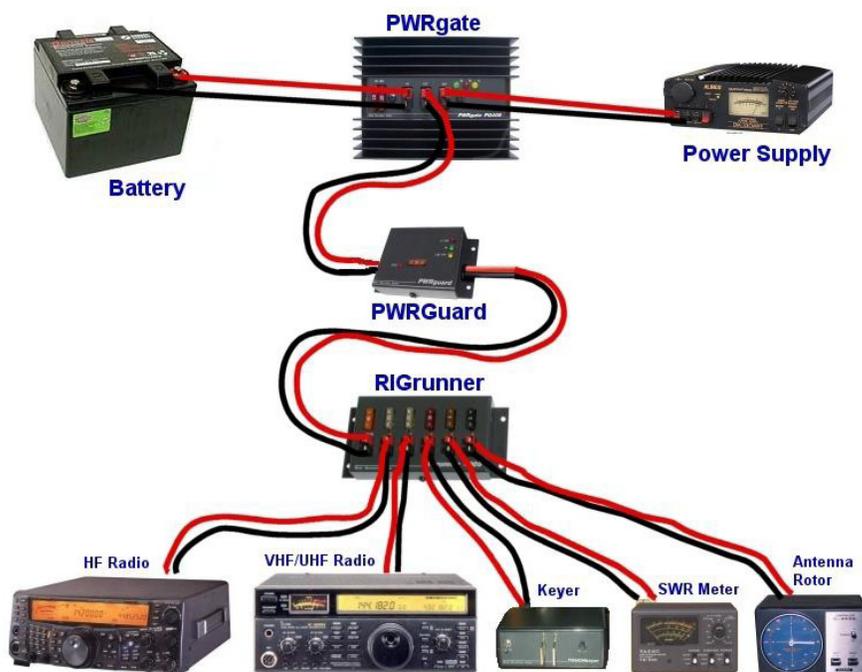

**10% Discount on PWRguard with purchase of a Super PWRgate PG40s**

**Offer valid between 08/01/2011 - 08/31/2011**

**Use discount code: PGD10**

## Building a DC Uninterruptible Power Supply for Your Ham Shack

West Mountain Radio provides all the tools you need to build a simple, customizable, and cost-effective uninterruptible power supply (UPS) right at home! Learn how West Mountain Radio products make it easy to find out how much power your rig consumes during normal use and properly size your backup battery. We will later show you how to assemble your UPS and maintain it, ensuring your rig is always protected from power loss.


### *How it Works*

A UPS allows you to create a system that provides continuous power to your Amateur radio equipment in emergency situations. The system utilizes West Mountain Radio's PWRgate product to monitor the voltage supplied to your equipment and immediately switch power sources depending on whichever source's voltage is higher.

This article will walk you through every step for building a UPS to meet the exact demands of your radio equipment. The process begins with understanding the power required by your equipment and choosing both a power supply and battery to fit those needs. After determining and purchasing the correct power supply and battery, we'll assemble the UPS and discuss how to maintain your setup to ensure the equipment is always protected from power loss.

## UPS System Overview

A typical UPS assembled using West Mountain Radio components will look like the one shown here.

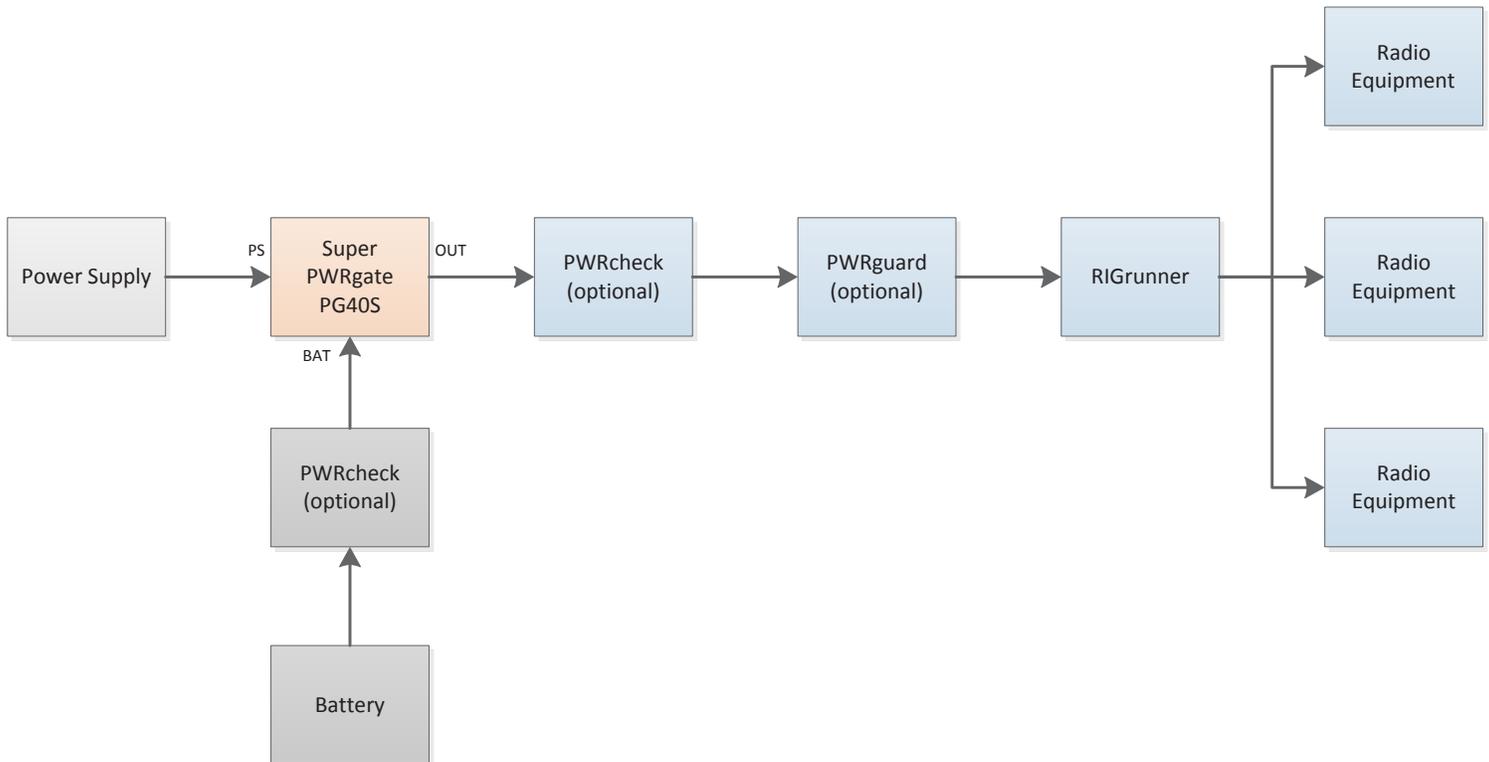

### **Super PWRgate PG40S** [[www.westmountainradio.com/UPSPGATE](http://www.westmountainradio.com/UPSPGATE)]

The Super PWRgate PG40S is a 12V backup power switch/charger designed to power equipment from either a power supply or battery. In the case of a power blackout or power supply failure, the device will instantly switch to a battery, providing your radio equipment with stable, uninterrupted power. When power is restored, the PWRgate will switch back to the power supply as well as recharge and maintain the battery, automatically preparing your system for the next power emergency. The Super PWRgate PG40S is optimized to charge and maintain full capacity for AGM and Gel sealed, lead-acid type batteries.

### **PWRcheck** [[www.westmountainradio.com/UPSPCK](http://www.westmountainradio.com/UPSPCK)]

The PWRcheck is a DC power analyzer that can measure 0V to 60V up to 40A. The device can help assess the load requirements, as well as monitor the status and health, of a DC power supply system.

For this article, the PWRcheck will be used to determine the power requirements of your radio equipment. Such measurement will help you to calculate and choose the best battery to power your equipment.

***PWRguard*** [[www.westmountainradio.com/UPSPGD](http://www.westmountainradio.com/UPSPGD)]

The PWRguard is an automatic safety switch for use between a power source and load. The device will instantly cut power to the load if the supply voltage ever goes above 15V or below 11.5V. In addition, the device will prevent a battery from over-discharging by cutting it off before it is drained past 11.5V.

For this article, the PWRguard is used to protect the radio equipment connected through the RIGrunner to the PWRgate. This added security helps protect your equipment from damage when an under or overvoltage spike occurs.

***RIGrunner*** [[www.westmountainradio.com/UPSRIG](http://www.westmountainradio.com/UPSRIG)]

The RIGrunner is a power strip that provides a safe, convenient way to connect all of your 12V DC radio equipment to a power source. Separate fused outputs are provided for overcurrent protection on each system component. In addition, the device is equipped with Anderson Powerpole® connectors that allow your system to conform to Amateur Radio Emergency Services (ARES), Radio Amateur Civil Emergency Service (RACES), Radio Society of Great Britain (RSGB), and American Radio Relay League (ARRL) recommendations for high current 12V DC connectors.

For this article, the RIGrunner is used to connect all of your devices to the PWRguard. Several models of the RIGrunner are available to suit both the quantity and demand of your equipment.

***Power Supply***

The UPS built in this article is rated for 12V at up to 40A systems. Make sure to use a variable power supply capable of at least 15V to ensure the battery can be charged.

***Battery*** [[www.westmountainradio.com/UPSBAT](http://www.westmountainradio.com/UPSBAT)]

West Mountain Radio recommends using sealed lead acid batteries for your UPS because they are easy to maintain and do not generate dangerous fumes while recharging. Two types of sealed lead acid batteries are Absorbed Glass Mat (AGM) and Gel.

AGM batteries are a more popular choice due to their capability of a higher burst of transient current and excellent life expectancy if kept above 60% charge. AGM batteries are typically less expensive than Gel.

Gel batteries do not offer the same power capacity for the size but do offer a slower discharge rate. Gel batteries operate at higher temperatures as well as in any orientation. It is important to note that the charging process for Gel batteries is very specific, and if not followed properly may permanently damage the battery.

West Mountain Radio offers both types of batteries for your ordering convenience. Batteries are shipped directly by the distributor.

### **Computerized Battery Analyzer III (CBA III)** [[www.westmountainradio.com/UPSCBA](http://www.westmountainradio.com/UPSCBA)]


The CBA III is a battery capacity tester. Software is provided with the CBA III that can record and graphically display the behavior of a battery as it is used.

While not a part of the UPS system, the CBA III is used to determine the true capacity and capability of your system's battery. The performance of your battery will differ depending on the demand of your equipment and health of your battery. This tool allows us to confirm that your equipment will be protected and powered for the time you require.

### **Measure Your Rig's Power Requirements**

This step shows us how much power your Amateur radio equipment requires to operate. It uses West Mountain Radio's PWRcheck product to measure the amp-hours drawn from your power supply by the equipment during normal and emergency operation. This information is useful to calculate the correct battery to power your equipment when the main power source is lost.

1. Connect the power supply to the **Source** end of the PWRcheck.
2. Connect your equipment through the RIGrunner and PWRgate to the **Load** end of the PWRcheck.

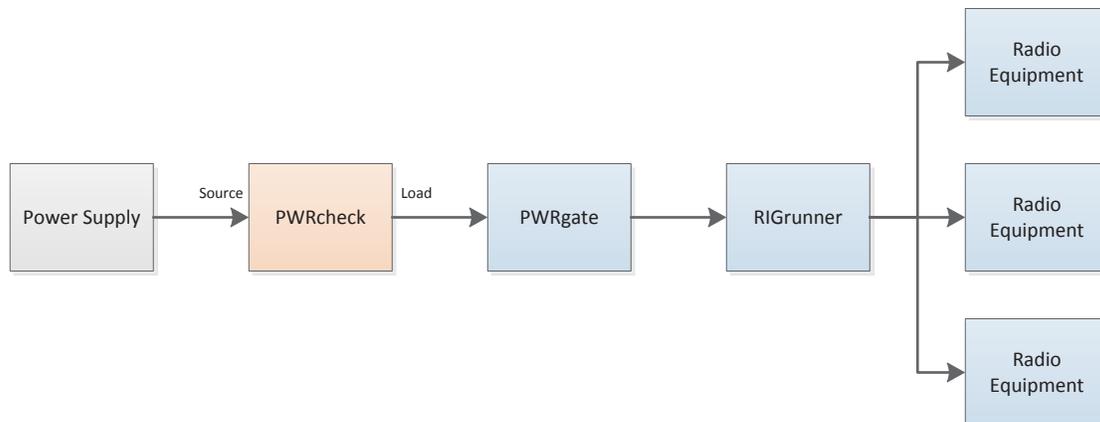

3. Turn the power supply on and set it to provide 13.8V DC. The PWRcheck will turn on, displaying the voltage produced by the power supply on the screen.
4. Press the **Display Format** button on the PWRcheck until you see a screen labeled **AHOUR**.
5. Allow the PWRcheck to monitor the power supply and equipment while you use your rig as you normally would - ideally monitoring at least 24 hours of operation. If considering the UPS for emergency situations, test the equipment under heavy usage. Afterwards, the **AHOUR** screen will display how many amp-hours were required to power your rig.
6. Divide this number by the total number of hours your rig was tested. The result is the average current load of the equipment. Use this information when choosing the battery for your UPS system.

**NOTE:** Test the power requirements of your Amateur radio setup using the PWRcheck every time you add or remove equipment. All equipment has different power requirements and modifying your setup may change the amount of power your UPS needs to provide. This means you may have greater usage and needs during emergency operation. Take this into account while designing your UPS.



### *Specify the Battery Capacity <sup>[1]</sup>*

Specifying the capacity of your ham shack's back-up battery involves more than multiplying your rig's average load current by the desired backup time in hours. If you do not consider derating factors such as capacity tolerance, battery life cycle, and run time relative to 20 hours, your back-up battery will not have the capacity to give you years of trouble-free service.

West Mountain Radio's new online **Battery Capacity Calculator** takes those factors into account and is ideal for use with AGM and Gel sealed lead acid batteries. It can be found online at: [www.westmountainradio.com/batcalc](http://www.westmountainradio.com/batcalc)

**EXAMPLE:** Below is a UPS system designed to provide 0.5A to a system for 3 days. We will refer to this example battery throughout this article.

Current load = 0.5 A      Backup hours = 72 hrs

**Calculator**

Average Current Load:  Amps

Backup Hours:  Hours

**Battery Capacity: 57.96 Amp-Hours**


The required battery capacity would be 58 amp-hours.

### *Verify the Battery Capacity*


After the battery type is calculated and purchased, we want to make sure it can actually fit the demand of your equipment. Now use West Mountain Radio's CBA III to characterize the battery's behavior over time on a PC and compare it to the data used to choose the battery. We recommend testing the battery and power needs of your system using the PWRcheck and CBA III every 3 months to ensure your UPS is in working condition.

**NOTE:** The CBA III device and software provided must be installed on a PC before performing this step. For instructions, see the software CD provided with the CBA III.


1. Verify that the battery is fully charged. A full charge is required for the CBA III to perform an accurate analysis of the battery's capacity.
2. Connect the battery to the **BATTERY** input on the CBA III.
3. Connect your PC via the **USB** port on the device.




- Open the CBA III Software. After the splash screen, a window will open showing an empty white box and different information along the right-hand side.

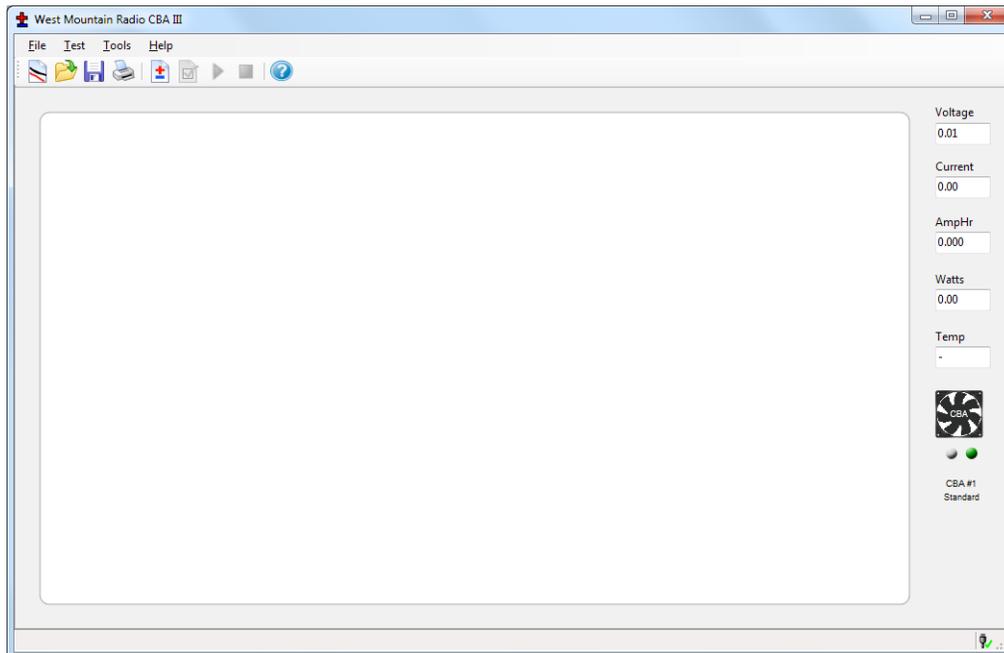

- Click the **New Test** button  to open a new battery test.
- The next window is requesting information about the battery.

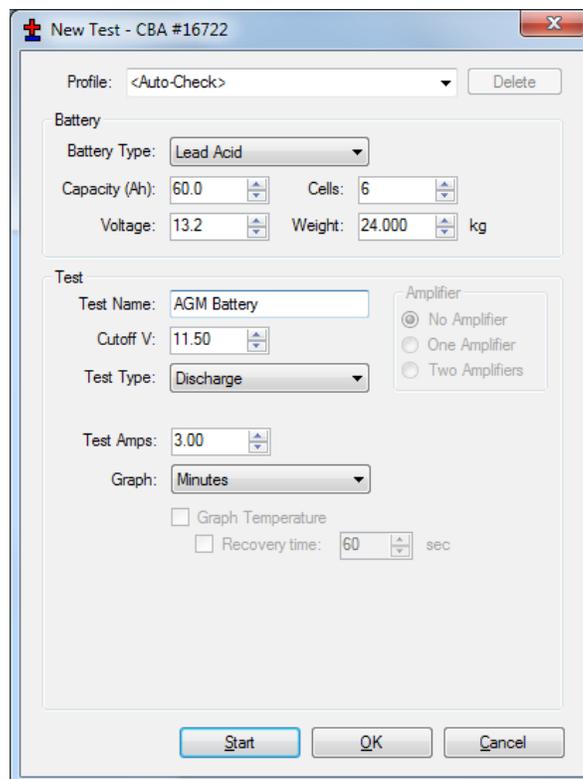

- a. For the **Battery** section, fill out the available fields according to the specifications listed for your battery.
  - b. For **Test Name**, enter a name for the test. This is required for the test to run.
  - c. For **Cutoff V**, enter 11.5V. This is the voltage where some radio equipment will stop functioning and will prevent the battery from being overly discharged.
  - d. For **Test Type**, select **Discharge**. This will show us the behavior of the battery's voltage throughout the test.
  - e. For **Test Amps**:
    - i. If the backup hours required is **less than 20** hours, test the battery using the average current load determined in the Test Power Supply section. This will allow us to confirm that the battery can last the amount of time for which we chose it.
    - ii. If the backup hours required is **greater than or equal to 20** hours, test the battery using its amp-hours capacity divided by 20. This will allow us to verify the value for which the manufacturer tested it.
- EXAMPLE:** Our UPS was designed to provide 72 hours of power and was later calculated to require a 58Ah battery. Assume we purchased a 60Ah battery. That means the **Test Amps** parameter should be 3A.
- f. For **Graphs**, select **Minutes**. This will show us how the voltage drops with respect to time. The total amp-hours used will be displayed along the right-hand side.
  - g. Click **Start** to close the window and proceed.
7. The software opens a window and begins the test.
- a. If the backup hours required is **less than 20** hours, the test will run until the cutoff voltage is reached. When finished, compare the time for the discharge to your backup power requirements. This confirms whether or not the battery is sufficient to power your equipment.
  - b. If the backup hours required is **greater than or equal to 20** hours, the test will run for about 20 hours until the cutoff voltage is reached. When finished, compare the total amp-hours displayed on the right-hand side of the graph to those listed for the battery. This will determine whether or not the battery meets the capacity for which the manufacturer tested it and therefore its capability to power your equipment.
8. When the test is complete, a graph, similar to below, displays the data.

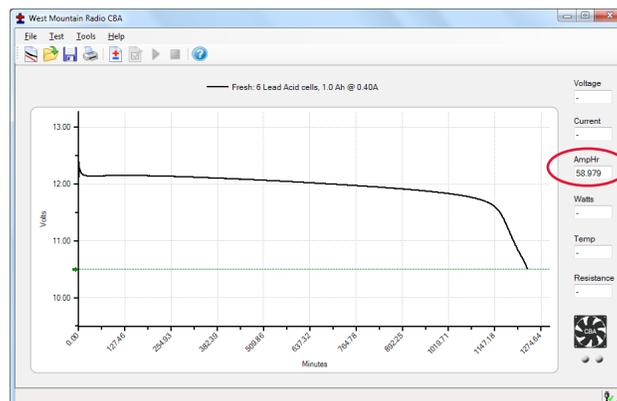

**EXAMPLE:** We purchased a 60Ah battery and should expect the graph to show the battery to be around 60Ah. Since our test verifies this capacity, the battery is good to use in our UPS.

9. Click the **Save** button  to save the test results for future reference.




### Compare Your Battery to When it Was New

Battery capacity will degrade over time, lasting anywhere between 6 months to 48 months depending on usage and battery chemistry. The battery's capacity can be checked regularly using West Mountain's Radio CBA III device. A battery is considered near end-of-life if its charge capacity is around 60% to 80% of its initial charge capacity.


The initial battery test file can be opened at a later date to have additional tests recorded alongside it, allowing the multiple tests to be compared.

1. Verify that the battery is fully charged. A full charge is required for the CBA III to perform an accurate analysis of the battery's capacity.
2. Open the CBA III software, click the **Open File** button , and select the file with which we performed the initial battery analysis.
3. The test will open. Click the **Add Test** button . A window will appear asking whether you want to add a new test to the current document, or create a new document. Click **New Test** to close the window and proceed.

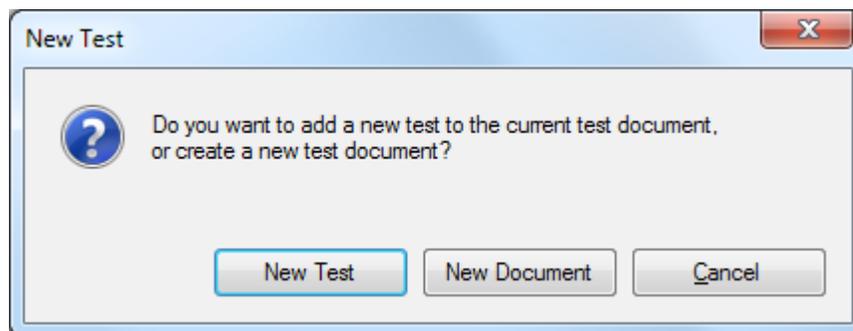

4. A window opens to request information about the battery. Fill out the information following the same process outlined earlier in this section. When finished, click **Start** to close the window and proceed.
5. The initial graph will appear again. A second, different colored line will begin recording the new data measured by the CBA III.
6. The following graph demonstrates what a degrading battery will look like using the CBA III. The black line is the initial test result, while the red line is the new test result.


**EXAMPLE:** The initial test of the battery's capacity measured around 60Ah. The new test measures a capacity around 48Ah. Because the new capacity is around 60% to 80% of the original, the battery is approaching end-of-life and purchasing a replacement battery should be considered.

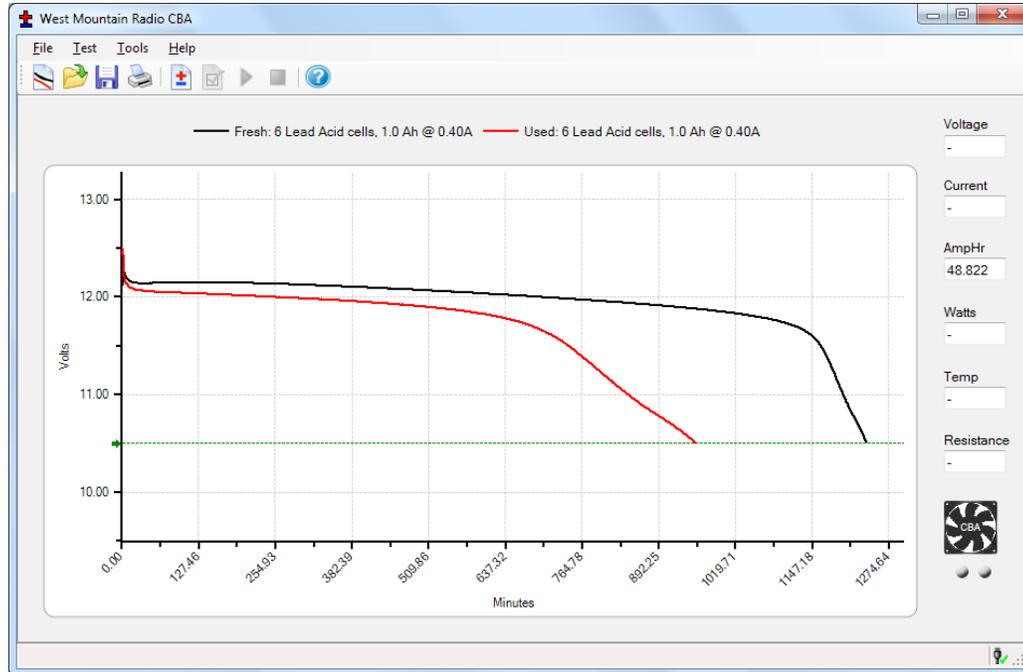

Battery degradation makes it extremely important to test your battery at regular intervals, usually every 3 months, to ensure your equipment will be protected when there is a power outage and the need for emergency communications.

### Assemble Your UPS System

Assemble your UPS system as shown in the following diagram.

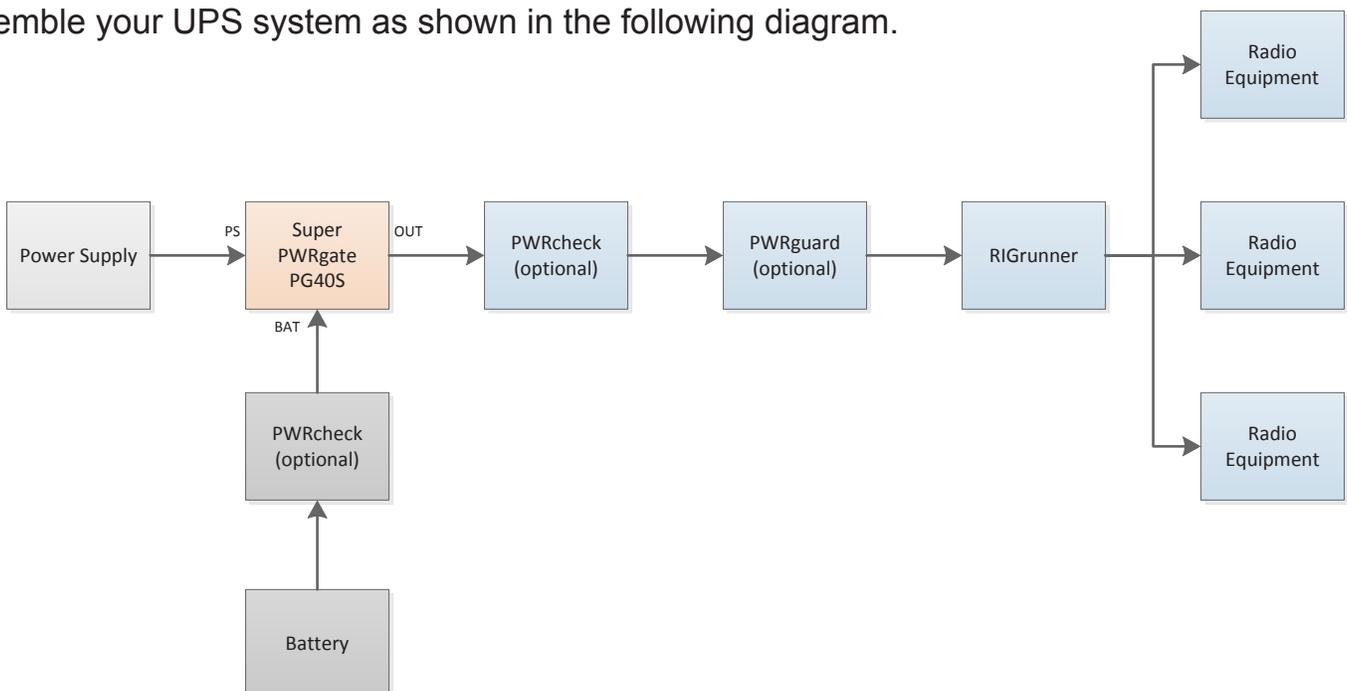

## Options

- Place a PWRguard between your radio equipment and PWRgate to protect your system from under or overvoltage spikes.
- Place a PWRcheck between the Battery and PWRgate to keep track of the battery's charge and capacity. This will let you to monitor the degradation of the battery, if any, and whether or not charges are complete.
- Place a PWRcheck between your radio equipment and PWRgate to see the power demand of your system in real time.

## Wires and Connectors

- All wires have some resistance that can cause a voltage drop between devices. Use heavy gauge wire at as short a length as possible to reduce this effect. An online power loss calculator for wire runs can be found online at: [www.westmountainradio.com/wirecalc](http://www.westmountainradio.com/wirecalc)
- West Mountain Radio carries 15, 30 and 45 amp Powerpole connectors for up to 16, 12 and 10 gauge wire, respectively. A video tutorial showing how to assemble Powerpole connectors using West Mountain Radio's PWRcrimp tool is online at: [www.westmountainradio.com/nlvideo](http://www.westmountainradio.com/nlvideo)

## Setting Up PWRgate for Your Battery Type

Different battery types require different methods of charging. The PWRgate is equipped to charge either AGM or Gel sealed lead acid batteries. The battery mode must be selected using the jumper pins labeled **J1** located in the lower right-hand corner of the inside of the PWRgate. Remove the fuses and both screws from the top cover to access the inside.

- a. If using an AGM battery, the power supply must be set to provide 14.5V. The jumper must be installed on both pins.
- b. If using a Gel battery, the power supply must be set to provide 14.1V. The jumper must be installed on only one pin.

## Congratulations!

You have built your own customized UPS and can now rest easy knowing your Amateur radio equipment is protected during emergency power outages. A UPS built with West Mountain Radio's DC power products will provide a smooth transition from your power supply to your backup battery without disturbing the operation of your rig, then switch back to your power supply and recharge your battery after power is restored. Your rig will be protected from power supply over and undervoltage and your battery from over-discharge. Finally, you are able to monitor how your UPS performs as well as check the health of your battery, ensuring your system is well prepared for emergency communications!

73 and good DX  
The hams at West Mountain Radio

[1] "Sealed Lead Acid Battery Applications." Transtronics. [wiki.xtronics.com/index.php/Sealed\\_Lead\\_Acid\\_Battery\\_Applications](http://wiki.xtronics.com/index.php/Sealed_Lead_Acid_Battery_Applications).  
All trademarks are the property of their respective owners.